


YAZOO

YAZOO YHR16B COMMERCIAL MOWER OWNER'S MANUAL

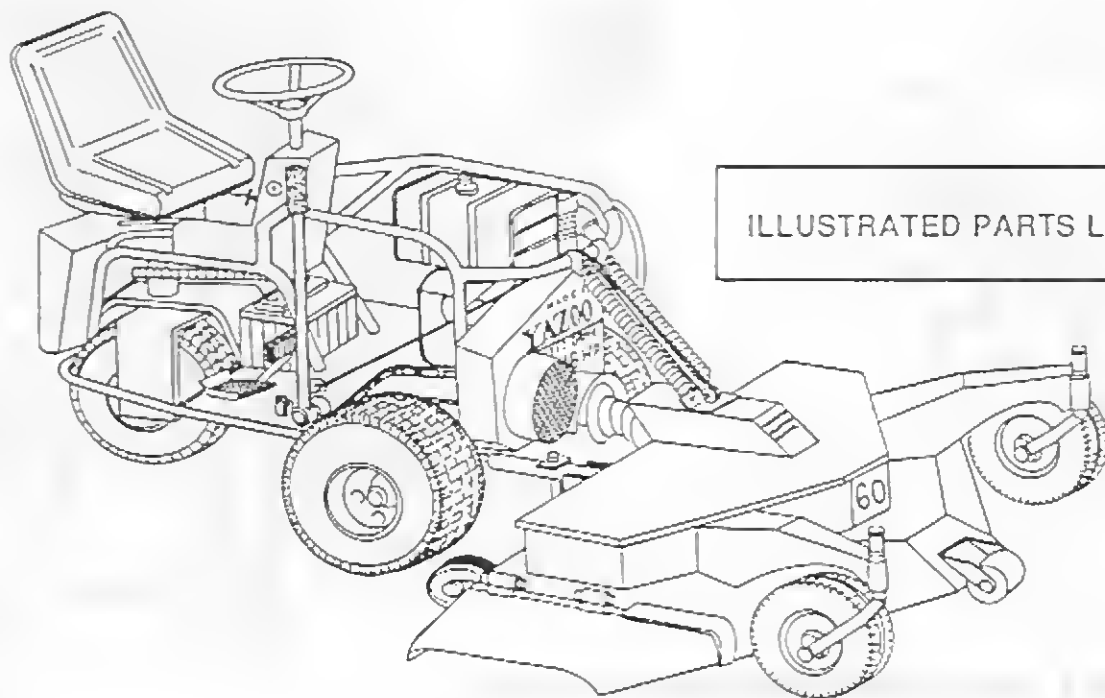

ILLUSTRATED PARTS LIST

LITERATURE NUMBER Y101 001


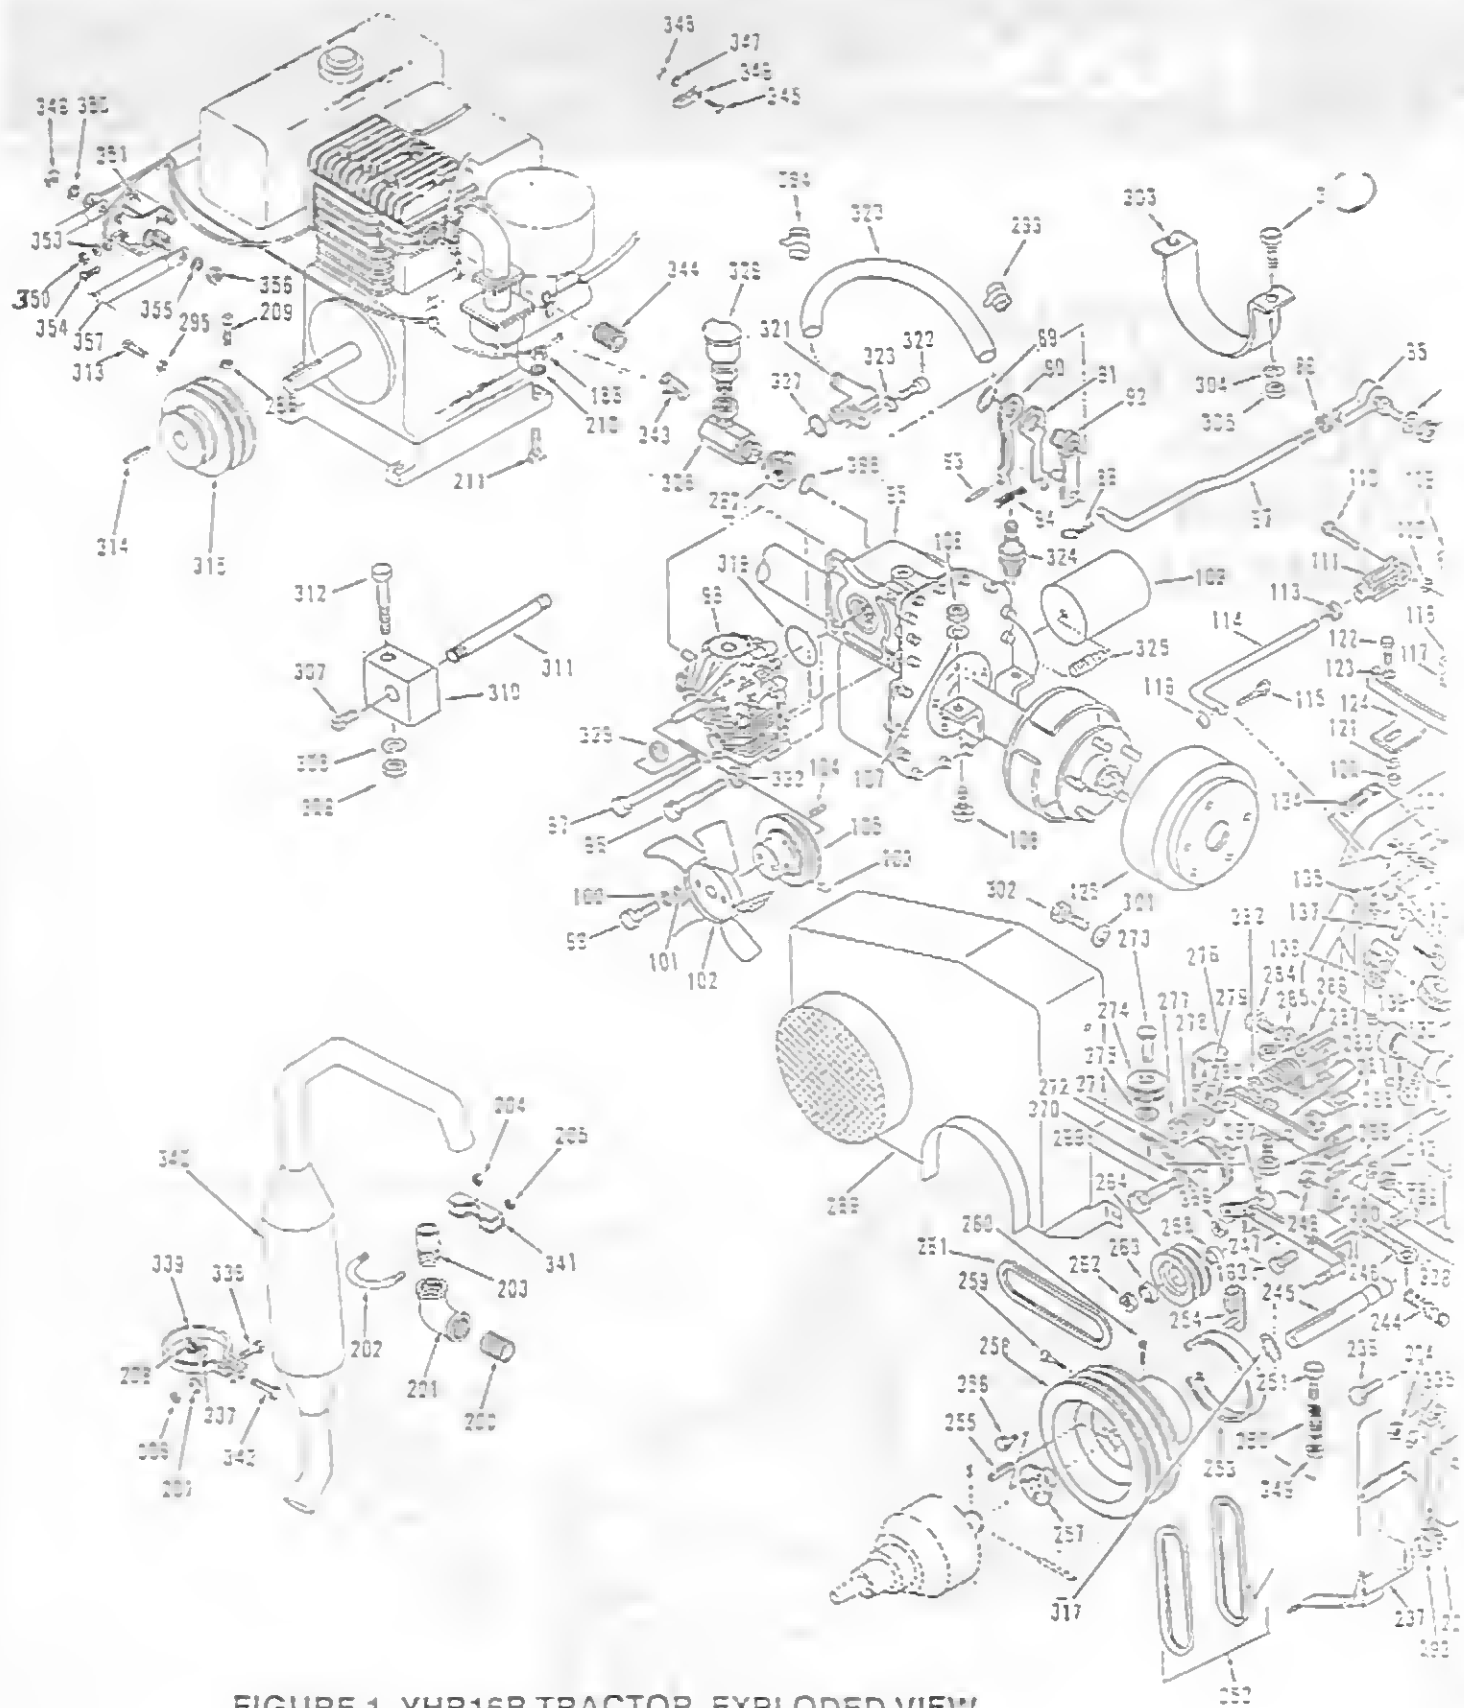


FIGURE 1. YHR16B TRACTOR, EXPLODED VIEW

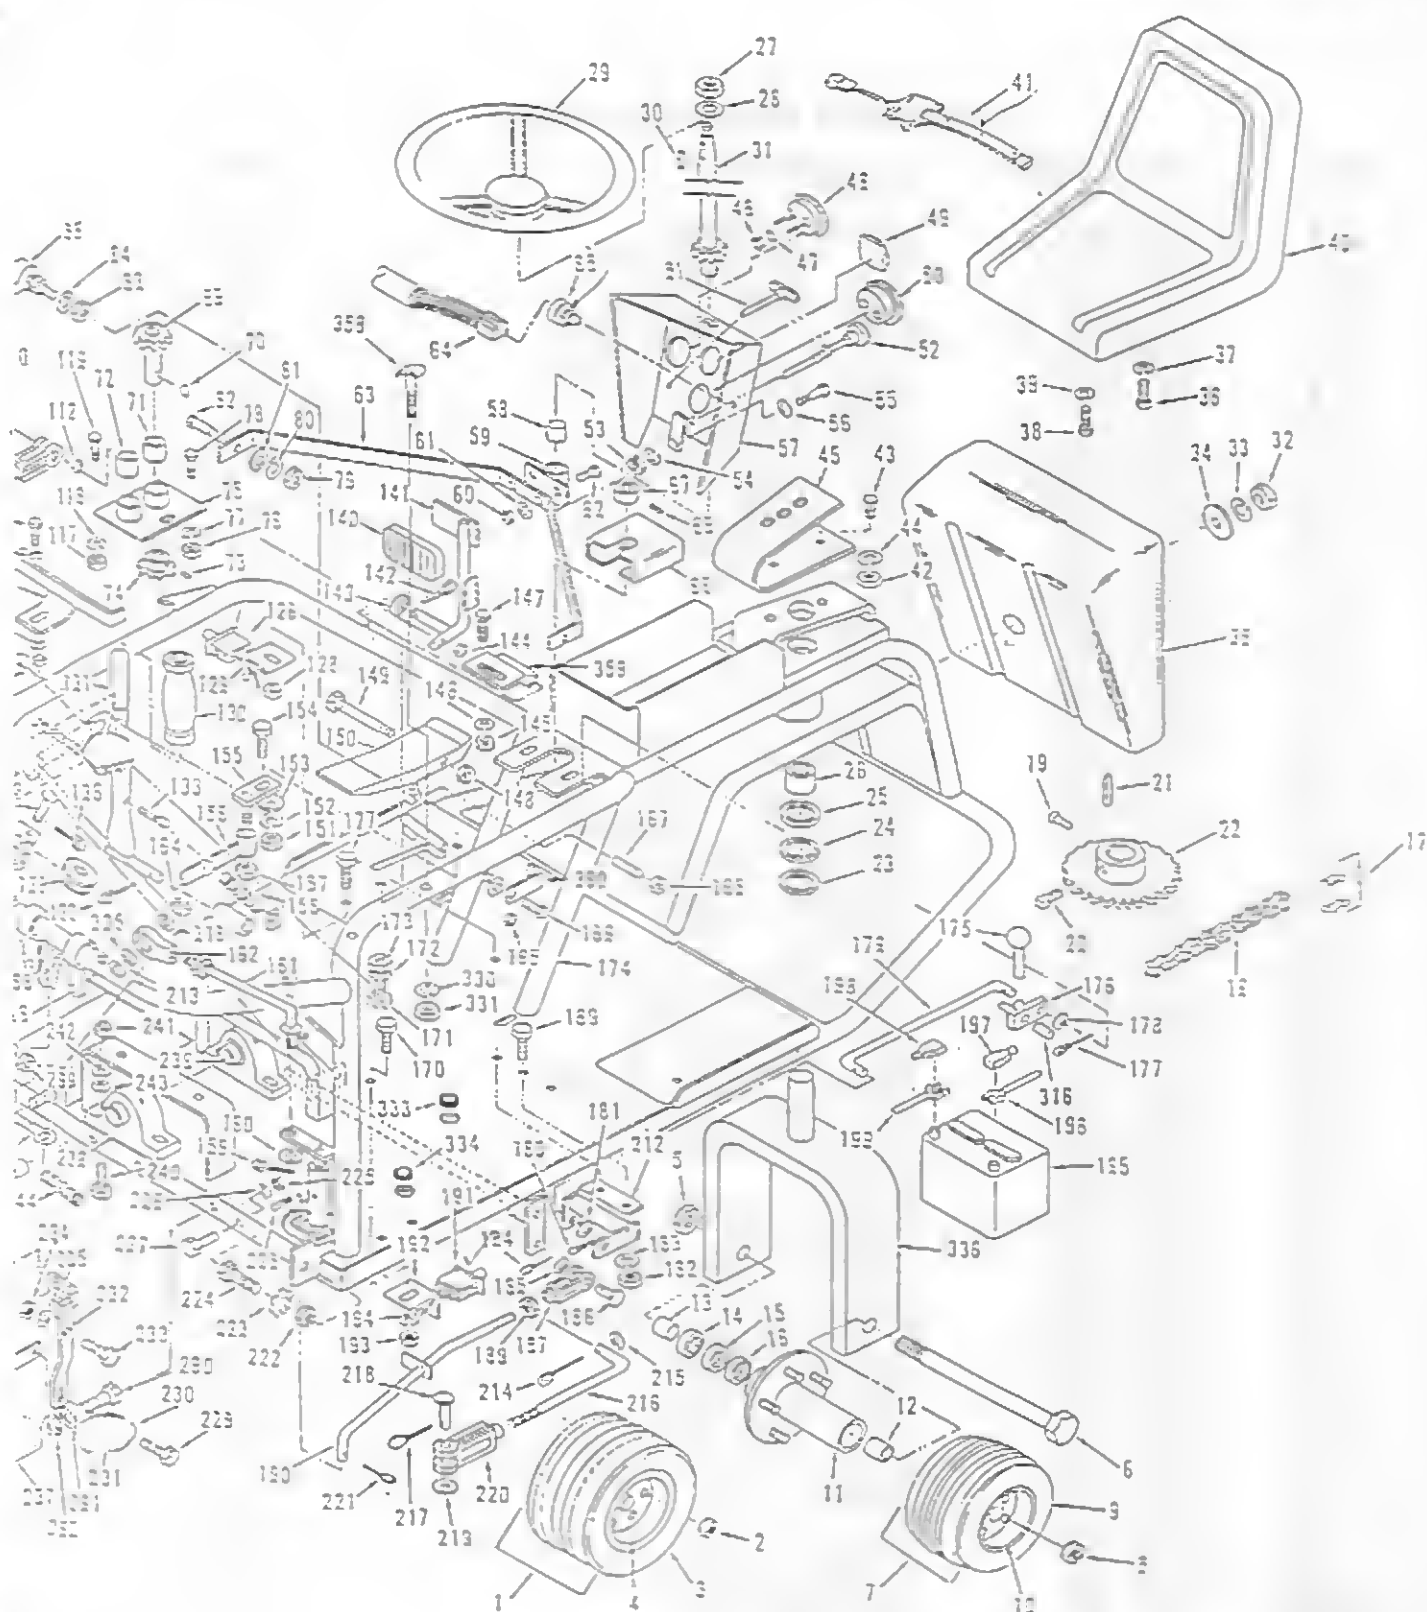

YHR16B
OWNER'S MANUAL

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY
1-1	2305-022	WHEEL ASSEMBLY	2
1-2	1401-061	NUT, TAPERED 7/16"	10
1-3	2003-067	TIRE, 16 X 6.5	2
1-4	1805-026 008	RIM, FRONT BEADED	2
1-5	1401-081	NUT, FLEX LOCK 3/4"	1
1-6	0103-097	AXLE, 3/4" X 10 1/2"	1
1-7	2305-018	WHEEL ASSEMBLY	1
1-8	1401-061	NUT, TAPERED 7/16"	5
1-9	2003-066 058	TIRE, 18 X 9.5	1
1-10	1805-027 007	RIM, BEADED	1
1-11	0807-038	HUB, REAR WHEEL	1
1-12	1913-074	SPACER, RIDER REAR	1
1-13	1913-216	SPACER, 1 1/2"	1
1-14	1902-005	SEAL	1
1-15	0204-034	BEARING	1
1-16	0312-008	CONE	1
1-17	1204-001	LINK, MASTER	1
1-18	0305-045	CHAIN	1
1-19	1901-034	SCREW, SET 3/8" X 1/4" NC	1
1-20	1901-034	SCREW, SET 3/8" X 1/4" NC	1
1-21	1102-002	KEY, 1/4" X 1/4" X 1"	1
1-22	1917-044	SPROCKET, STEERING	1
1-23	2301-097	WASHER, THRUST	1
1-24	0204-078	BEARING, THRUST	1
1-25	2301-097	WASHER, THRUST	1
1-26	0215-101	BUSHING	2
1-27	1401-050	NUT, JAM 1/2" NF	1
1-28	2301-096	WASHER, CONCAVE	1
1-29	2303-008	WHEEL, STEERING	1
1-30	1102-013	KEY, WOODRUFF RC 45	1
1-31	1904-116	SHAFT, LONG STEERING	1
1-32	1401-071	NUT, 5/8" SAE	1
1-33	2301-010	WASHER, LOCK 5/8"	1
1-34	2301-028	WASHER	1
1-35	2304-009	WEIGHT, RIDER	1
1-36	0209-494 494	BOLT, 1/2" - 13 X 3/4"	1
1-37	2301-008	WASHER, LOCK 1/2"	1
1-38	0209-494	BOLT, 1/2" - 13 X 3/4"	1
1-39	2301-008	WASHER, LOCK 1/2"	1
1-40	1903-013 022	SEAT, TRACTOR	1
1-41	1923-026	SWITCH, SEAT	1
1-42	1401-020	NUT, 5/16" USS	2
1-43	0209-114	BOLT, CAP 5/16" X 1" NC	2
1-44	2301-004	WASHER, LOCK 5/16"	2
1-45	1916-080	SPRING, SEAT	1
1-46	1401-197	NUT	2
1-47	2301-284	WASHER	2
1-48	0706-002	GUAGE, AMMETER	1
1-49	0902-001	INCLINOMETER	1
1-50	0706-003	GUAGE, HOUR METER	1

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY
1-51	0301-034	CABLE, THROTTLE	1
1-52	0301-035	CABLE, CHOKE	1
1-53	1401-010	NUT, 1/4" USS	1
1-54	2301-003	WASHER, LOCK 1/4"	1
1-55	0209-049	BOLT, 1/4" X 1"	1
1-56	2301-020	WASHER, FLAT 1/4"	1
1-57	1613-002	PANEL, RIDER INSTRUMENT	1
1-58	0215-103	BUSHING, STEERING	1
1-59	0214-221	BRACKET, UPPER STEERING	1
1-60	1401-020	NUT, 5/16" USS	2
1-61	2301-004	WASHER, LOCK 5/16"	2
1-62	0209-114	BOLT, CAP 5/16" X 1" NC	2
1-63	0214-220	BRACKET, UPPER STEERING	1
1-64	0811-040	HARNESS, WIRING YHR16B	1
1-65	1923-009	SWITCH, PANEL	1
1-66	1901-006	SCREW, SET 5/16" X 1"	1
1-67	0311-003	COLLAR	1
1-68	0704-084	GUARD, STEERING	1
1-69	1904-115	SHAFT, INNER STEERING	1
1-70	1102-013	KEY, WOODRUFF RC 45	1
1-71	0215-103	BUSHING, STEERING	1
1-72	0215-103	BUSHING, STEERING	1
1-73	1901-006 136	SCREW, SET 5/16" X 1"	1
1-74	1917-045	SPROCKET, SMALL STEERING	1
1-75	0214-144	BRACKET	1
1-76	1401-020	NUT, 5/16" USS	2
1-77	2301-004	WASHER, LOCK 5/16"	2
1-78	0209-114	BOLT, CAP 5/16" X 1" NC	2
1-79	1401-020	NUT, 5/16" USS	2
1-80	2301-004	WASHER, LOCK 5/16"	2
1-81	2301-021	WASHER, FLAT 5/16"	2
1-82	0209-138	BOLT, 5/16" X 2"	2
1-83	1401-032	NUT, 3/8" SAE	1
1-84	2301-006	WASHER, LOCK 3/8"	1
1-85	0502-017	END, ROD	1
1-86	1401-032	NUT, 3/8" SAE	1
1-87	1808-283	ROD, DIRECTIONAL CONTROL	1
1-88	1604-002	PIN, COTTER 3/32" X 1"	1
1-89	1806-008	RING, SNAP	1
1-90	0214-453	BRACKET, NEUTRAL RETAINER	1
1-91	0214-453	BRACKET, NEUTRAL RETAINER	1
1-92	0102-135	ARM, FORWARD/REVERSE	1
1-93	1604-083	PIN, ROLL 1/4" X 1 1/4"	1
1-94	1916-177	SPRING, SMALL	1
1-95	2006-075	ASSEMBLY, HYDROSTATIC TRANSMISSION	1
1-96	0209-161	BOLT, 5/16" X 3"	2
1-97	0209-831	BOLT, 5/16" X 5 1/4" NC	2
1-98	2006-073	TRANSMISSION, BDU 21	1
1-99	0209-021	BOLT, 1/4" X 3/4" USS	2
1-100	2301-003	WASHER, LOCK 1/4"	2

YHR16B
OWNER'S MANUAL

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY
1-101	2301-020	WASHER, FLAT 1/4"	2
1-102	0612-006	FAN, BLOWER EATON	1
1-103	1901-006	SCREW, SET 5/16" X 1"	1
1-104	1102-059	KEY, 5MM X 1.250	1
1-105	1608-407	PULLEY, TRANSMISSION	1
1-106	1401-030	NUT, 3/8" USS	2
1-107	2301-006	WASHER, LOCK 3/8"	2
1-108	0209-350	BOLT, 3/8" X 2 1/2" NC HH	2
1-109	0610-018	FILTER, TRANSMISSION OIL	1
1-110	0209-126	BOLT, 5/16" X 1 1/2" RR	1
1-111	2501-027	YOKE	1
1-112	1401-021	NUT, LOCK 5/16" USS	1
1-113	1401-020	NUT, 5/16" USS	1
1-114	1808-150	ROD	1
1-115	1604-002	PIN, COTTER 3/32" X 1"	1
1-116	2301-021	WASHER, FLAT 5/16"	1
1-117	1401-020	NUT, 5/16" USS	1
1-118	2301-004	WASHER, LOCK 5/16"	1
1-119	0209-114	BOLT, CAP 5/16" X 1" NC	1
1-120	1401-020	NUT, 5/16" USS	1
1-121	2301-004	WASHER, LOCK 5/16"	1
1-122	0209-114	BOLT, CAP 5/16" X 1" NC	1
1-123	2301-021	WASHER, FLAT 5/16"	1
1-124	0214-206	BRACKET	1
1-125	0217-018	KIT, BRAKE DRUM	2
1-126	1923-033	SWITCH ASSEMBLY, SAFETY	1
1-127	0209-114	BOLT, CAP 5/16" X 1" NC	1
1-128	1401-020	NUT, 5/16" USS	1
1-129	0214-430	BRACKET	1
1-130	0703-016 634	GRIP, SPONGE 7/8"	1
1-131	1201-008	LEVER, CUTTING SECTION	1
1-132	1604-002	PIN, COTTER 3/32" X 1"	1
1-133	1604-038	PIN, COTTER 3/16" X 1"	1
1-134	1916-012	SPRING, CUTTING SECTION LEVER	1
1-135	0307-002	CLAMP ASSEMBLY	1
1-136	1604-002	PIN, COTTER 3/32" X 1"	1
1-137	1604-107	PIN	1
1-138	1913-040	SPACER, 5/8" X 7/8"	1
1-139	1809-001	ROLLER, CABLE	1
1-140	1601-001	PAD	1
1-141	1602-011	PEDAL, BRAKE	1
1-142	1604-002	PIN, COTTER 3/32" X 1"	1
1-143	2301-022	WASHER, FLAT 3/8"	1
1-144	1401-021	NUT, LOCK 5/16" USS	1
1-145	1401-020	NUT, 5/16" USS	1
1-146	2301-004	WASHER, LOCK 5/16"	1
1-147	0209-114	BOLT, CAP 5/16" X 1" NC	1
1-148	1401-021	NUT, LOCK 5/16" USS	1
1-149	0209-181	BOLT, 5/16" X 3 3/4"	1
1-150	1602-024	PEDAL, DIRECTIONAL CONTROL	1

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY
1-151	1401-020	NUT, 5/16" USS	1
1-152	2301-004	WASHER, LOCK 5/16"	1
1-153	2301-021	WASHER, FLAT 5/16"	1
1-154	0209-114	BOLT, CAP 5/16" X 1" NC	1
1-155	0214-463	BRACKET	1
1-156	0100-007	ACTUATOR, SWITCH	1
1-157	1401-021	NUT, LOCK 5/16" USS	1
1-158	1916-012	SPRING, CUTTING SECTION LEVER	1
1-159	1604-002	PIN, COTTER 3/32" X 1"	1
1-160	2301-022	WASHER, FLAT 3/8"	1
1-161	1808-284	ROD, FRONT ENGAGING	1
1-162	0502-002	END, ROD	1
1-163	0209-326	BOLT, 3/8" X 1 1/2"	1
1-164	1401-031	NUT, LOCK 3/8"	1
1-165	1401-021	NUT, LOCK 5/16" USS	1
1-166	0209-108	BOLT, 5/16" X 3/4" USS	1
1-167	1604-157	PIN, SWITCH	1
1-168	1401-020	NUT, 5/16" USS	1
1-169	0209-114	BOLT, CAP 5/16" X 1" NC	1
1-170	0209-114	BOLT, CAP 5/16" X 1" NC	1
1-171	0209-050	BOLT, 1/4" X 2"	1
1-172	1401-010	NUT, 1/4" USS	1
1-173	1401-010	NUT, 1/4" USS	1
1-174	0605-451	FRAME ASSEMBLY, YHR16B	1
1-175	1104-012	KNOB, 3/8" - 16 HYDRO	1
1-176	1201-062	LEVER, ENGAGING HYD.	1
1-177	1604-002	PIN, COTTER 3/32" X 1"	1
1-178	1913-040	SPACER, 5/8" X 7/8"	1
1-179	1808-202	ROD, UPPER BLADE ENGAGING	1
1-180	1604-002	PIN, COTTER 3/32" X 1"	1
1-181	2301-021	WASHER, FLAT 5/16"	2
1-182	1401-020	NUT, 5/16" USS	2
1-183	2301-004	WASHER, LOCK 5/16"	2
1-184	1604-002	PIN, COTTER 3/32" X 1"	1
1-185	2301-021	WASHER, FLAT 5/16"	1
1-186	1604-013	PIN, 5/16" X 1 1/4" R	1
1-187	2507-027	YOKE	1
1-188	1401-030	NUT, 3/8" USS	4
1-189	1401-020	NUT, 5/16" USS	1
1-190	1808-285	ROD, BLADE ENGAGING	1
1-191	1923-030	SWITCH ASSEMBLY, SAFETY	1
1-192	0214-430	BRACKET	1
1-193	1401-020	NUT, 5/16" USS	1
1-194	2301-004	WASHER, LOCK 5/16"	1
1-195	0203-003	BATTERY, PTO MODELS	1
1-196	0301-058	CABLE (POSITIVE)	1
1-197	0303-016	CAP, BATTERY, RED	1
1-198	0303-017	CAP, BATTERY, BLACK	1
1-199	0301-057	CABLE (NEGATIVE)	1
1-200	0503-022	EXTENSION, B&S EXHAUST	1

YHR16B
OWNER'S MANUAL

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY
1-201	0503-009	ELBOW, MUFFLER	1
1-202	0307-012	CLAMP, MUFFLER 1 1/2"	1
1-203	0503-029	EXTENSION, B&S	1
1-204	0307-012	CLAMP, MUFFLER 1 1/2"	1
1-205	0307-012	CLAMP, MUFFLER 1 1/2"	1
1-206	1401-020	NUT, 5/16" USS	1
1-207	2301-004	WASHER, LOCK 5/16"	1
1-208	1401-020	NUT, 5/16" USS	1
1-209	1901-136	SCREW, SET 5/16" X 1"	1
1-210	2301-006	WASHER, LOCK 3/8"	4
1-211	0209-326	BOLT, 3/8" X 1 1/2" NC	4
1-212	0605-900-076	BRACKET, BLADE ENGAGING ASSEMBLY	1
1-213	2301-022	WASHER, FLAT 3/8"	1
1-214	1604-002	PIN, COTTER 3/32" X 1"	2
1-215	2301-021	WASHER, FLAT 5/16"	2
1-216	1808-200	ROD, BRAKE HYDRO	2
1-217	1604-002	PIN, COTTER 3/32" X 1"	2
1-218	1604-013	PIN, 5/16" X 1 1/4" R	2
1-219	2301-021	WASHER, FLAT 5/16"	2
1-220	2501-027	YOKE	2
1-221	1604-002	PIN, COTTER 3/32" X 1"	1
1-222	1401-070	NUT, JAM 5/8" SAE	2
1-223	2301-011	WASHER, STAR LOCK 5/8"	2
1-224	0209-617	BOLT, 5/8" X 1 1/2" NC	2
1-225	1401-020	NUT, 5/16" USS	1
1-226	2301-004	WASHER, LOCK 5/16"	1
1-227	0209-114	BOLT, CAP 5/16" X 1" NC	1
1-228	0603-004	FITTING, GREASE	1
1-229	0209-114	BOLT, CAP 5/16" X 1" NC	1
1-230	2301-004	WASHER, LOCK 5/16"	1
1-231	1401-020	NUT, 5/16" USS	1
1-232	0214-471	BRACKET, BELT GUARD MTG. ASSEMBLY	1
1-233	0209-114	BOLT, CAP 5/16" X 1" NC	1
1-234	1401-020	NUT, 5/16" USS	1
1-235	2301-004	WASHER, LOCK 5/16"	1
1-236	0209-120	BOLT, 5/16" X 1 1/4" NC	1
1-237	0704-364	GUARD, BELT	1
1-238	0204-077	BEARING, PILLOW BLOCK	1
1-239	0204-077	BEARING, PILLOW BLOCK	1
1-240	0209-425	BOLT, 7/16" X 1 1/2"	2
1-241	1401-040	NUT, 7/16"	2
1-242	2301-007	WASHER, LOCK 7/16"	2
1-243	2301-022	WASHER, FLAT 3/8"	2
1-244	1916-116	SPRING	1
1-245	1904-191	SHAFT, PULLEY PTO	1
1-246	0212-026	BOLT, EYE 3 1/16" DIA.	1
1-247	0102-134	ARM ENGAGING ASSEMBLY	1
1-248	1401-002	NUT, FLEX LOCK 3/16" NC	1
1-249	1401-032	NUT, 3/8" SAE	1
1-250	1916-174	SPRING	1

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY
1-251	0209-341	BOLT, 3/8" X 2" NF	1
1-252	0205-137	BELT, DRIVE	2
1-253	0217-020	BRAKE, BAND	1
1-254	0214-276	BRACKET, BRAKE BAND	1
1-255	1102-058	KEY, 1/4" X 1/4" X 4"	1
1-256	0209-021	BOLT, 1/4" X 3/4" USS	4
1-257	0215-175	BUSHING	1
1-258	1608- 272 394	PULLEY, ENGINE PTO	1
1-259	1901-136	SCREW, SET 5/16" X 1"	1
1-260	1901-136	SCREW, SET 5/16" X 1"	1
1-261	0205-527	BELT, DRIVE # AX33	1
1-262	1401-072	NUT, FLEX LOCK 5/8" SAE	1
1-263	0204-019	BEARING, HUB 5/8" ID	1
1-264	1608-148	PULLEY, ENGINE IDLER	1
1-265	0204-019	BEARING, HUB 5/8" ID	1
1-266	1401-072	NUT, FLEX LOCK 5/8" SAE	1
1-267	0603-004	FITTING, GREASE	1
1-268	0209-108	BOLT, 5/16" X 3/4" USS	1
1-269	0209-517	BOLT, 1/2" X 2" NF	1
1-270	1913-200	SPACER, 1 1/8" OD X 7/8" ID	1
1-271	1608-365	PULLEY, PLASTIC IDLER	1
1-272	1604-002	PIN, COTTER 3/32" X 1"	1
1-273	1604-107	PIN	1
1-274	1809-001	ROLLER, CABLE	1
1-275	1913-040	SPACER, 5/8" X 7/8"	1
1-276	0214-467	BRACKET, ACTUATOR	1
1-277	1401-070	NUT, JAM 5/8" SAE	1
1-278	1913-095	SPACER	1
1-279	1913-095	SPACER	1
1-280	0215-177	BUSHING	1
1-281	0102-133	ARM, IDLER ASSEMBLY	1
1-282	1913-095	SPACER	1
1-283	1916-161	SPRING	1
1-284	0209-114	BOLT, CAP 5/16" X 1" NC	1
1-285	1401-020	NUT, 5/16" USS	1
1-286	2301-004	WASHER, LOCK 5/16"	1
1-287	1401-020	NUT, 5/16" USS	1
1-288	1401-051	NUT, FULL 1/2" NF LK	1
1-289	0704-363	GUARD, FRONT	1
1-290	0209-114	BOLT, CAP 5/16" X 1" NC	1
1-291	2301-004	WASHER, LOCK 5/16"	1
1-292	1401-020	NUT, 5/16" USS	1
1-293	0307-039	CLAMP, HOSE	1
1-294	0307-039	CLAMP, HOSE	1
1-295	1401-020	NUT, 5/16" USS	1
1-296	1401-020	NUT, 5/16" USS	1
1-297	1401-128	NUT, CONDUIT 1/2"	1
1-298	1806-001	O-RING	1
1-299	1401-010	NUT, 1/4" USS	1
1-300	2301-003	WASHER, LOCK 1/4"	1

YHR16B
OWNER'S MANUAL

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY
1-301	2301-020	WASHER, FLAT 1/4"	1
1-302	0209-049	BOLT, 1/4" X 1"	1
1-303	0704-367	GUARD, OIL FILTER	1
1-304	2301-004	WASHER, LOCK 5/16"	2
1-305	1401-020	NUT, 5/16" USS	2
1-306	0209-114	BOLT, CAP 5/16" X 1" NC	2
1-307	1606-038	PLUG, SQUARE 3/8"	1
1-308	2301-006	WASHER, LOCK 3/8"	1
1-309	1401-030	NUT, 3/8" USS	1
1-310	0101-123	ADAPTOR, OIL DRAIN	1
1-311	0812-039	HOSE, OIL DRAIN	1
1-312	0209-331	BOLT, 3/8" X 1 1/4" USS	1
1-313	1901-136	SCREW, SET 5/16" X 1"	1
1-314	1102-024	KEY, BLADE DRIVE PULLEY	1
1-315	1608-405	PULLEY, ENGINE	1
1-316	0215-026	BUSHING, 5/8" X 1/2"	1
1-317	1806-008	RING, SNAP	1
1-318	2301-006	WASHER, LOCK 3/8"	1
1-319	1902-073	O-RING	1
1-320	0812-067	HOSE	1
1-321	0101-054	FITTING, HOSE	1
1-322	0209-834	BOLT	1
1-323	2301-296	WASHER, FLAT	1
1-324	0101-153	FITTING, HOSE	1
1-325	0101-155	ADAPTOR	1
1-326	0315-012	CUP, OIL BREATHER	1
1-327	1806-145	O-RING	1
1-328	0101-156	ELBOW, SWIVEL TYPE	1
1-329	2301-020	WASHER, FLAT 1/4"	1
1-330	2301-004	WASHER, LOCK 5/16"	2 4
1-331	1401-020	NUT, 5/16" USS	2 4
1-332	2301-020	WASHER, FLAT 1/4"	1
1-333	1811-028	GROMMET, RUBBER	1
1-334	1811-004	GROMMET, RUBBER	1
1-335	2301-022	WASHER, FLAT 3/8"	1
1-336	2501-018	YOKE, STEERING	1
1-337	2301-004	WASHER, LOCK 5/16"	1
1-338	0209-120	BOLT, 5/16" X 1 1/4" NC	1
1-339	0214-298	BRACKET, MUFFLER SUPPORT	1
1-340	1304-005	MUFFLER, YHR16B	1
1-341	0307-112	CLAMP, MUFFLER 1 1/2"	1
1-342	0209-126	BOLT, 5/16" X 1 1/2" RR	1
1-343	0307-025	CLAMP, CABLE	1
1-344	0503-022	EXTENSION, B&S EXHAUST	1
1-345	0208-002	BOLT, 3/16" X 3/4" RH	1
1-346	0307-004	CLAMP, THROTTLE CABLE	1
1-347	2301-001	WASHER, LOCK 3/16"	1
1-348	1401-002	NUT, FLEX LOCK 3/16"	1
1-349	1401-020	NUT, 5/16" USS	1
1-350	2301-004	WASHER, LOCK 5/16"	1

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY
1-351	1923-007	SWITCH, SOLENOID	1
1-352	1401-197	NUT, BRASS 10-32	1
1-353	2301-001	WASHER, LOCK 3/16"	1
1-354	1901-003	SCREW, SHEET METAL 1/4" X 3/4"	2
1-355	2301-004	WASHER, LOCK 5/16"	1
1-356	1401-020	NUT, 5/16" USS	1
1-357	0301-115	CABLE, SOLENOID	1
1-358	0209-835	Bolt 5/16" X 2" curved ND	4
1-359	0214-153	Bracket	1
1-360	0217-012	Bracket, Park Lock	1

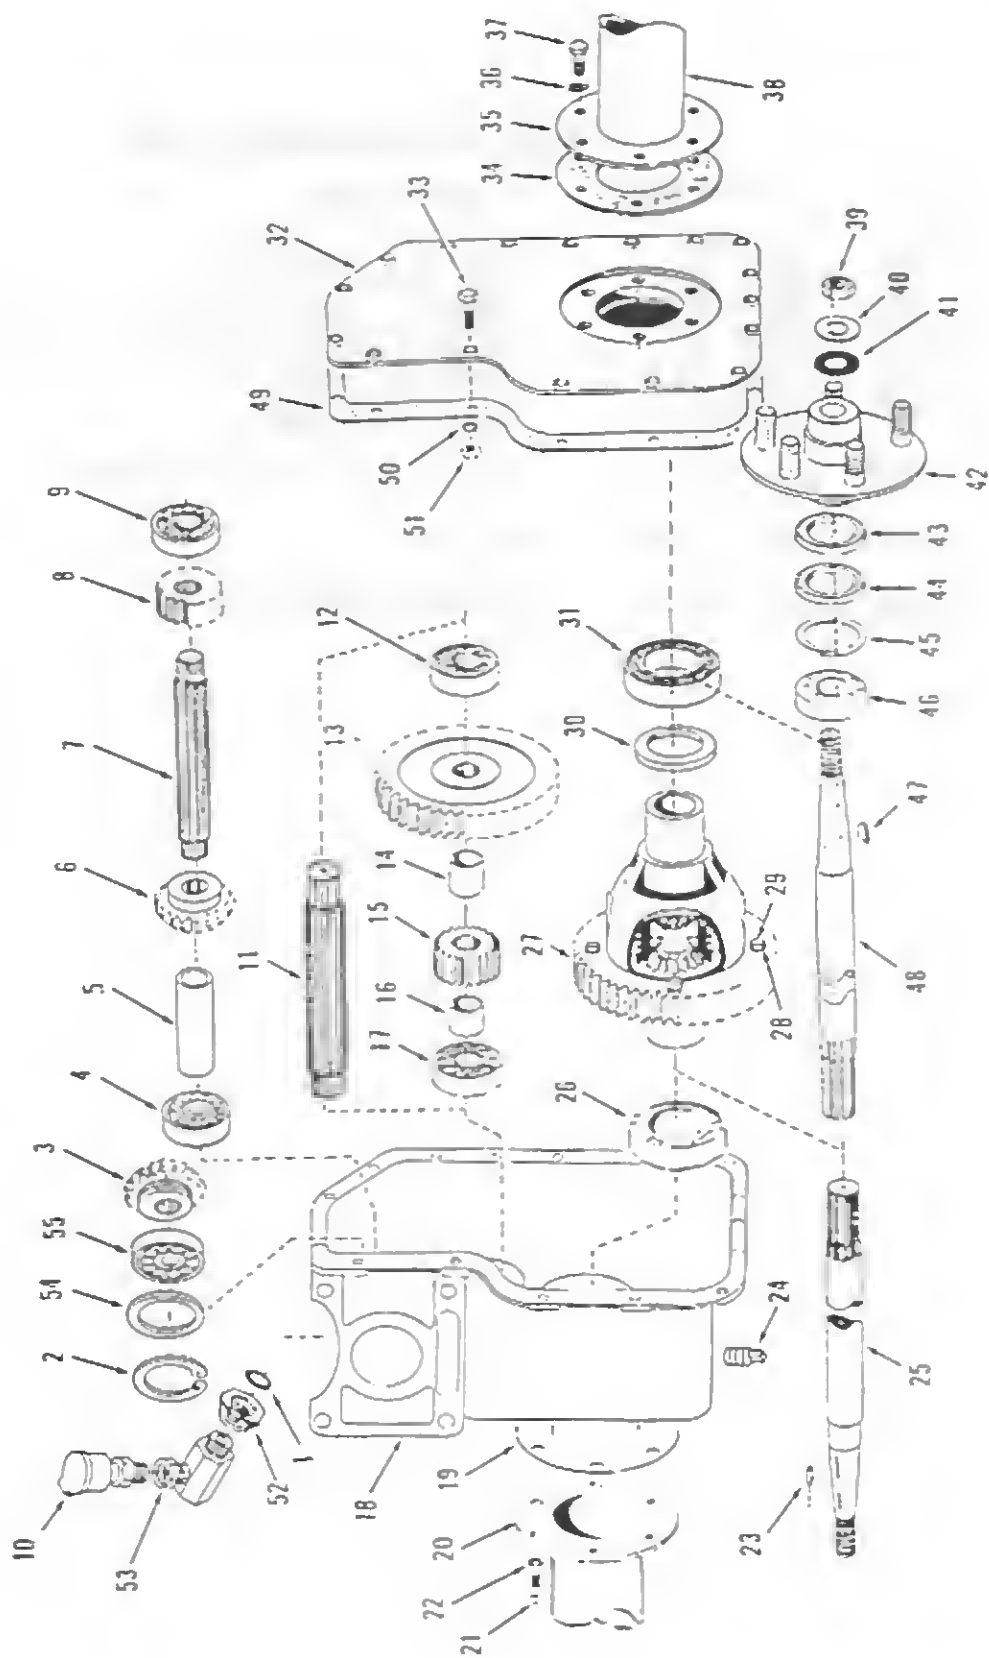


FIGURE 2. TRANSMISSION, EXPLODED VIEW

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY
2-1	1806-001	O-RING, 1/4" X 1"	1
2-2	1806-144	RING, SNAP	1
2-3	0702-148	GEAR, MITRE	1
2-4	0204-040	BEARING, BALL	1
2-5	1913-268	SPACER, TRANSAXLE	1
2-6	0702-147	GEAR, MITRE	1
2-7	1904-154	SHAFT, INTERNAL DRIVE	1
2-8	0702-057	GEAR, TRANSMISSION	1
2-9	0204-040	BEARING, BALL	1
2-10	0315-012	CUP, OIL BREATHER	1
2-11	1904-154	SHAFT, INTERNAL DRIVE	1
2-12	0204-040	BEARING, BALL	1
2-13	0702-053	GEAR, TRANSMISSION	1
2-21	0209-307	BOLT, 3/8" X 3/4" NC	6
2-22	2301-006	WASHER, LOCK 3/8"	6
2-23	1102-013	KEY, WOODRUFF	1
2-24	1606-006	PLUG, DRAIN	1
2-25	0103- 112 081	AXLE, SHORT	1
2-26	0204-039	BEARING, DIFFERENTIAL	1
2-27	0702-054	GEAR, TRANSMISSION	1
2-28	2301-006	WASHER, LOCK 3/8"	2
2-29	0209-318	BOLT, 3/8" X 1" NF HE	2
2-30	1913-034	SPACER, DIFFERENTIAL	1
2-31	0204-039	BEARING, DIFFERENTIAL	1
2-32	0304-156	CASE HALF, SHALLOW	1
2-33	0209-120	BOLT, 5/16" X 1"	17
2-34	0701-022	GASKET	1
2-35	0806-091	HOUSING, AXLE LONG	1
2-36	2301-006	WASHER, LOCK 3/8"	6
2-37	0209-307	BOLT, 3/8" X 3/4" NC	6
2-38	0806-091	HOUSING, AXLE LONG	1

YHR16B
OWNER'S MANUAL

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY
2-39	1401-071	NUT, FULL 5/8" SAE	10
2-40	2301-096	WASHER, CUP 5/8"	10
2-41	1806-001	O-RING, 1/4" X 1"	2
2-42	0807-036	HUB, DRIVE WHEEL	2
2-43	1902-012	SEAL, AXLE	2
2-44	1902-012	SEAL, AXLE	2
2-45	1207-025	RING, LOCK	2
2-46	0204-038	BEARING, AXLE	2
2-47	1102-013	KEY, WOODRUFF	1
2-48	0103- 082 082	AXLE, LONG	1
2-49	0701-103	GASKET, CASE	1
2-50	2301-004	WASHER, LOCK 5/16"	17
2-51	1401-020	NUT, 5/16" USS	17
2-52	1401-128	NUT, CONDUIT 1/2"	1
2-53	0101-156	ELBOW, SWIVEL TYPE	1
2-54	1913-269	SPACER	1
2-55	0204-159	BEARING, BALL	1


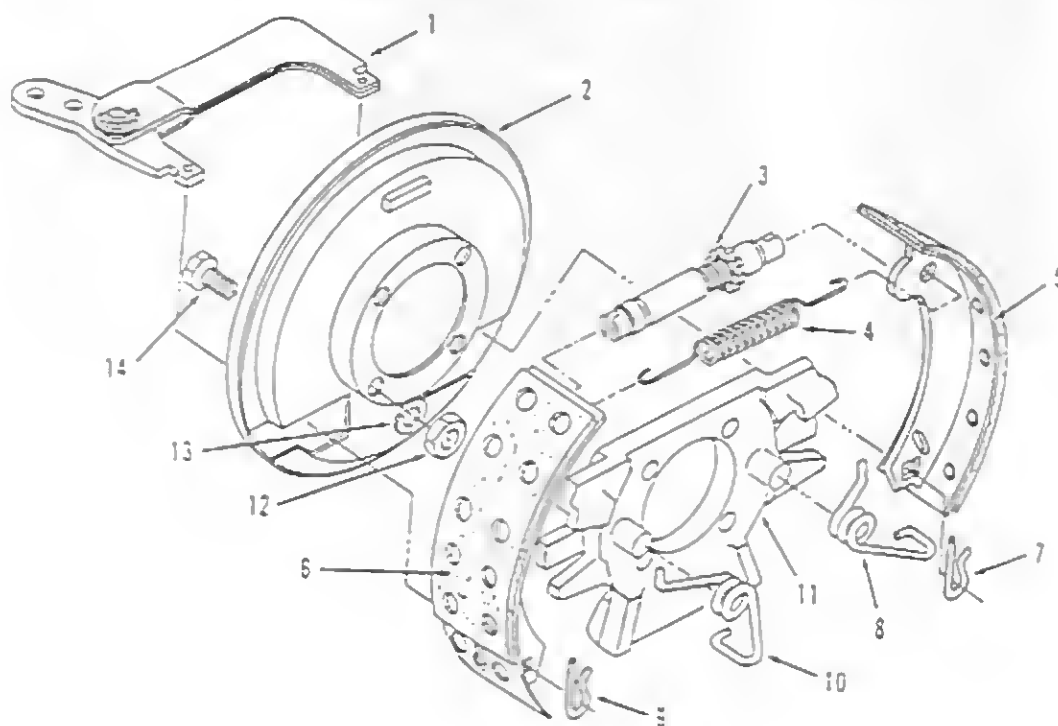


FIGURE 3. BRAKE, EXPLODED VIEW

WIRING DIAGRAM FOR YHR-SERIES TRACTORS

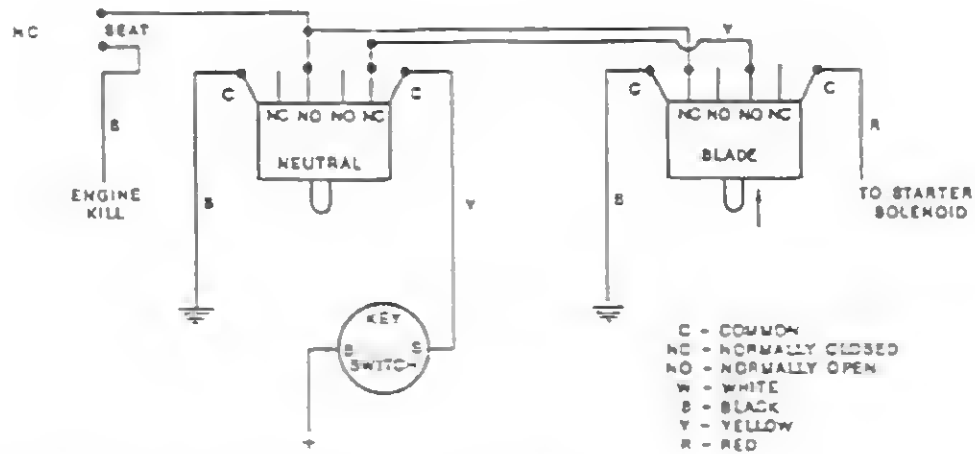

NOTES - The line leading to charging system has an inline fuse (3 Amp - 600 Volts)
 to direct current flow. A capacitor is to be added to the base of the hour meter
 (P/N 0333-001)

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY
3-1	1201-095	ASSY., PARK. BRAKE STRUT AND LEVER	2
3-2	1906-015	SHIELD, DUST	2
3-3	1901-216	ASSY., ADJUSTING SCREW PIVOT NUT	2
3-4	1916-145	SPRING, ADJUSTING SCREW (BLUE)	2
3-5	1908-013	ASSY., SHOE AND LINING	2
3-6	1908-012	ASSY., SHOE AND LINING	2
3-7	1604-133	RETAINER, PARKING BRAKE LEVER PIN	2
3-8	1916-144	SPRING, SHOE RETURN (RH) RED	2
3-9	1604-133	RETAINER, PARKING BRAKE LEVER PIN	2
3-10	1916-143	SPRING, SHOE RETURN (LH) GREEN	2
3-11	1935-003	TORQUE SPIDER, FINISHED	2
3-12	1401-020	NUT, 5/16" USS	8
3-13	2301-004	WASHER, LOCK 5/16"	8
3-14	0209-120	BOLT, 5/16" X 1 1/4" NC	8